


## Removal & Fitting of Drawers – Original Suspension Slides (Filing Cabinets)

**These instructions are relevant to the older version of our Bisley BS Flush & Classic Front Filing Cabinets.  
(Flush front cabinet pictured right).**



The instructions are intended as a guide, if you have any questions please seek further advice.



**Removal:** Make sure the drawer is unloaded:  
(Please take care while removing the drawer, as this can be awkward until practised).

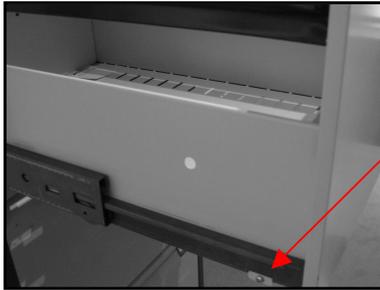


On each side of the drawer there is a suspension slide drop down tab (located at the front, as red arrows show) with a screw head visible.

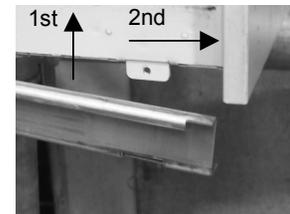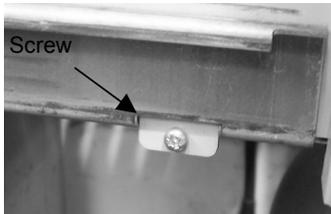

To remove the drawers, unscrew the screw on each side of the drawer, then raise the front of the drawer, pull forwards and away from the cabinet.  
(Remember to support the weight of the drawer as you lift)



**Rear Fitting:** (Please take care while fitting, especially when locating the rear of the drawer into the suspension slide inner member slots, as this can be awkward until practised).

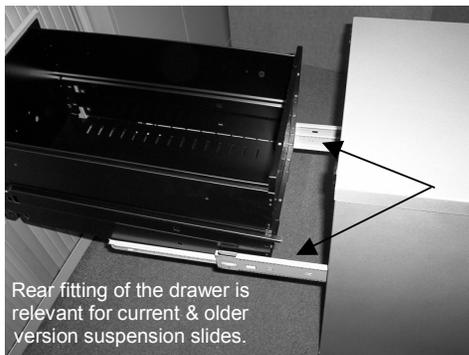

When fitting, rest the rear of the drawer onto the suspension slides inner members.




Slide the drawer backwards into the cabinet, raising the front to locate the right side edge of the drawer underneath the plastic locking bar tag.

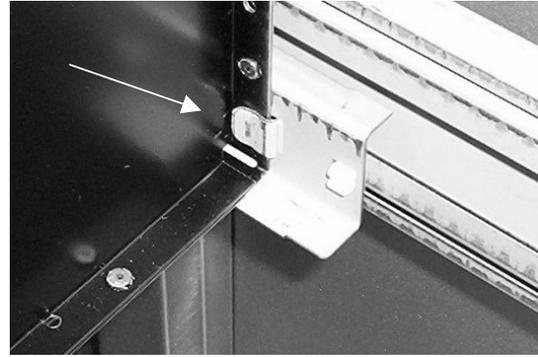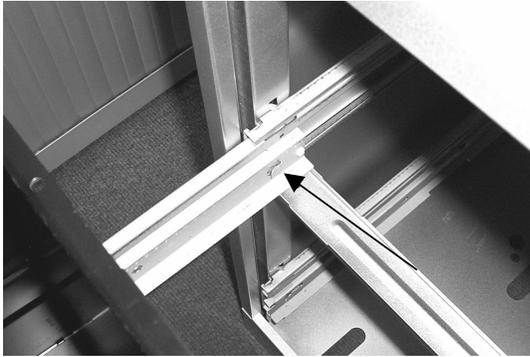

The suspension slide inner members have a cut out slot for the rear of the drawer to fit into. (In most instances it is not possible to see behind the drawer to view whether the drawer has located properly, but sometimes will this be apparent when the front of the drawer has been fitted, as the drawer will not travel smoothly or align correctly when closed).

### Front Fitting

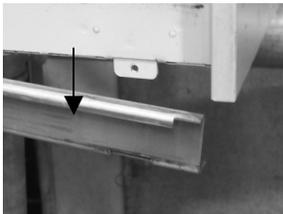

Lower the front of the drawer, lining up the tabs with the slots in the suspension slide inner members. Fit screw and tighten.